


Radio Coding Procedure Volkswagen

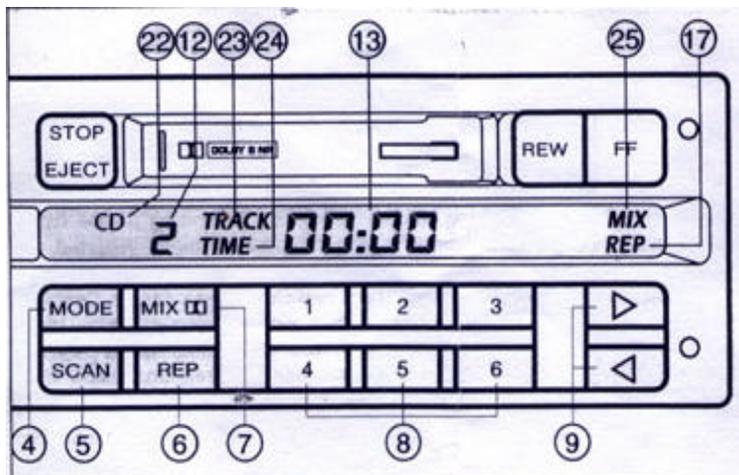

Anti-Theft Coding

When you switch off the radio and remove the key, a red diode in the face plate will start blinking. This means that the radio is in anti-theft code. The Anti-Theft Coding will prevent unauthorized persons from operating the unit if it has been removed from the vehicle

Whenever:

- The radio is disconnected from the vehicle current supply
- The battery is disconnected
- The electrical fuse for the radio is blown or removed

The word **SAFE** will appear in the frequency display when the radio is switched on. The unit will only work again if the correct code has been entered.

This code number and the radio serial number are on the "Radio Card" next to the table of contents in the front of the instruction booklet. If you do not have the radio code, you must remove the radio, acquire the serial number on the radio unit and call the local dealer for the proper radio code.

To cancel the electronic "lock-up" from the "SAFE" mode:

- Turn on the radio and the word "SAFE" appears in the display
- Press the **MODE** and **SCAN** buttons **simultaneously** and hold them down until "1000" lights up on the display. **Release the buttons! DO NOT** under any circumstances continue holding them down or press them once again. This will cause the radio to consider the number "1000" to be the input code number
- Use the station buttons **1 thru 4** to input the code number on your Radio Card or the appropriate code for the radio. Use the **1** to input the first digit of the code number, button **2** to input the second digit, and so on. For technical reasons the first digit can be a **1** or left blank (making the first digit a **0**. The following three digits, may be any number from **0 thru 9**.
- Once the code is shown on the display, press the **MODE** and **SCAN** buttons simultaneously and hold them down till the word "SAFE" appears in the frequency display.
- Release the buttons! Soon afterward, a frequency will be displayed and the radio is functional again.

Incorrect Code Number

Should the incorrect code number be entered, the word "**SAFE**" will appear in the display first blinking and then continuous.

You can now repeat the entire canceling procedure once. The number of attempts will be shown in the display.

If another incorrect code is entered your radio will go into "code lock" for approximately one hour. The radio will not play. Leave the radio switched on for one hour. After this time, the display with the number of incorrect attempts will go out and you can cancel the electronic lock up as described above.

This cycle of two attempts, one hour lock up still applies