


Connector assignment

Wiring harness plugs for airbag triggering unit

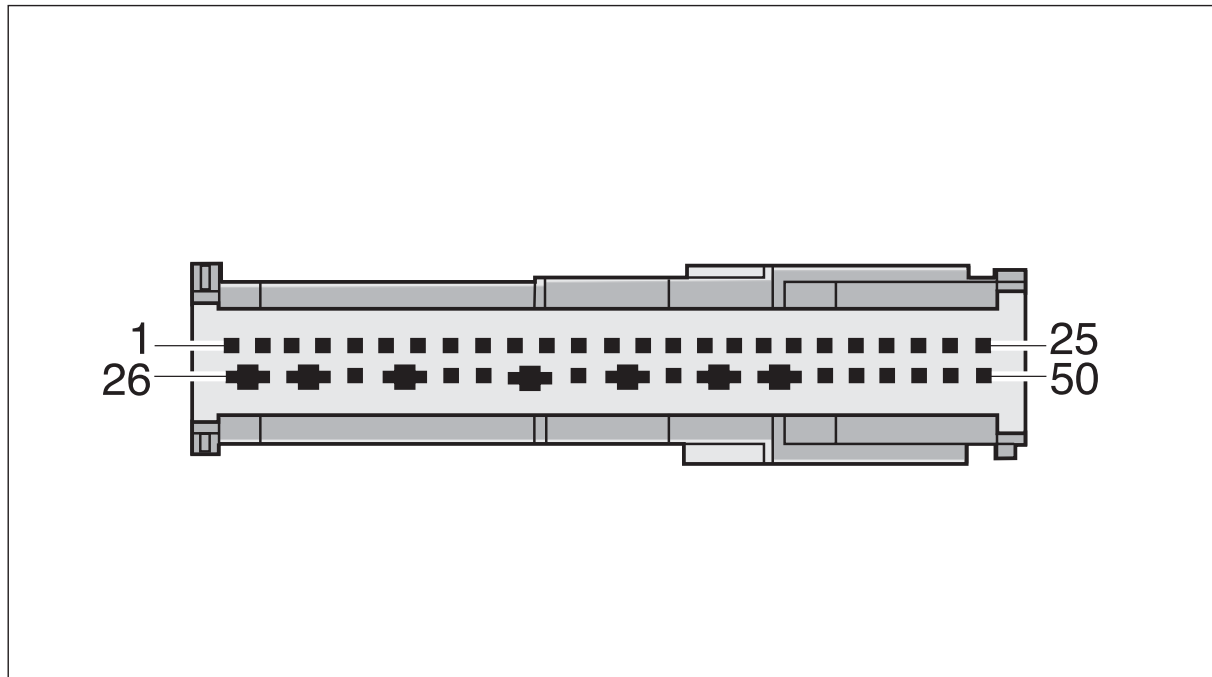

Pin	Designation	Pin	Designation
1	Seat belt tensioner, left positive	20	Driver's side airbag sensor
2	Seat belt tensioner, left ground	21	Passenger's side airbag
3	Seat belt tensioner, right positive	22 to 25	Not used
4	Seat belt tensioner, right ground	26/ 27	Short circuit bridge
5	Terminal 86s	28/ 29	Short circuit bridge
6	Terminal 31	30	Not used
7	Warning light	31/ 32	Short circuit bridge
8	Belt buckle, passenger	33	Child seat detection
9	K lead	34	Crash output
10	Driver's ignition pill, positive	35/ 36	Short circuit bridge
11	Driver's ignition pill, negative	37	Not used
12	Belt buckle, driver	38/ 39	Short circuit bridge
13	Passenger's ignition pill, positive	40	Not used
14	Passenger's ignition pill, negative	41/ 42	Short circuit bridge
15	Not used	43/ 44	Short circuit bridge
16	Driver's side airbag, positive	45	Not used

Pin	Designation	Pin	Designation
17	Driver's side airbag, ground	46	Not used
18	Passenger's side airbag, positive	47	Not used
19	Passenger's side airbag, ground	48 to 50	Not used